




(GARDEN WINDOW SCREEN)
INSTALLATION GUIDE

THE WORLD'S FIRST FLEXIBLE WINDOW SCREEN

Wrap your hands around FlexScreen's longest sides, squeeze the sides together 2"-3".


STEP 1

While keeping sides compressed 2"-3", aim FlexScreen's bottom corners into the screen track

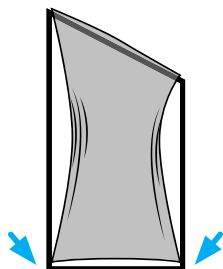


STEP 3

Aim short leg corner of the FlexScreen into the screen track.

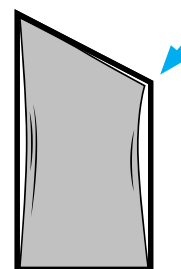

STEP 2


Aim top corner of the long leg of the FlexScreen into the screen track.

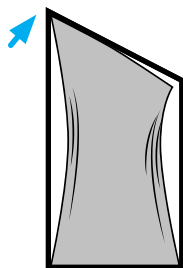

STEP 4

Once all corners are aligned release both sides to complete installation.

Close your window and enjoy your completely uninterrupted view!

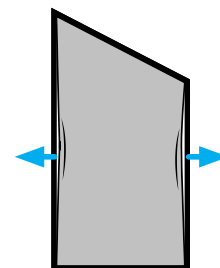

CONTACT US TODAY: flexscreen.net

Visit our website to watch FlexScreen in action




(GARDEN WINDOW SCREEN)
REMOVAL GUIDE

THE WORLD'S FIRST FLEXIBLE WINDOW SCREEN


STEP 1

Pull tabs towards each other, squeezing inward 2"-3" inches.

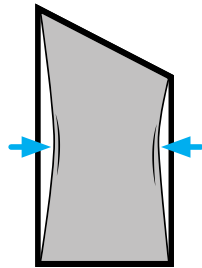


STEP 3

Still compressing both sides, gently remove long leg side from screen track.

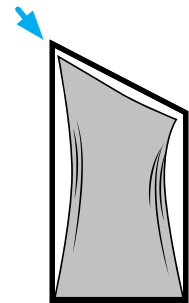


STEP 2

While keeping sides compressed, gently remove short leg side from screen track.

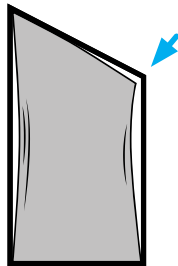

STEP 4

Once long leg and short legs are removed from screen track, release sides and remove from opening.

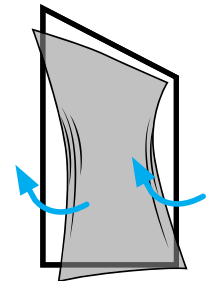

CONTACT US TODAY: flexscreen.net

Visit our website to watch FlexScreen in action